


- The bracket can be mounted ***either way up*** as shown above
- Refer to markings on your stem for Torque settings
- Use the appropriate spacer and bolt combination to keep the brace from touching the stem faceplate
- Bolts need a ***minimum*** of 5mm thread overlap

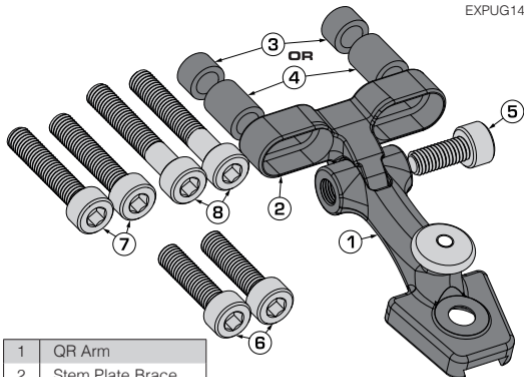

1	QR Arm
2	Stem Plate Brace
3	2 x 5mm Spacer
4	2 x 10mm spacer
5	1 x 12mm long bolt
6	2 x 20mm long bolts
7	2 x 25mm long bolts
8	2 x 30mm long bolts

Bolt 5 (tighten to 8 Nm) and add a light smear of grease on the bolt thread and head, ensure there is no grease on the flat mating faces