

## MAINTENANCE

Inspect and test your light and bracket apparatus before every ride.

Keep your light clean and free of dirt, be careful when cleaning any mud or dirt from lens to avoid scratching.

Never use a high pressure spray or hose on your light.

Do not use harsh abrasive or corrosive materials to clean your light.

For extended periods when your light is not in use fully recharge the light once a month, as a long duration with no charge is detrimental to the cells.

## WARNING

⚠ Exposure Lights are very powerful lighting systems, please take care when operating. Do not look directly into the light or shine directly at others, including other road users.

Exposure Lights / Ultimate Sports Engineering Ltd. accept no liability for any injuries or other damages arising from the use of their product in any circumstances.

**NOTE:** Patents apply.

## WARRANTY & SERVICE - LIGHT FOR LIFE

**Please do not send any products back to us without contacting our service team first to discuss your issue and for a valid returns number.**

All our lights come with a 2 year warranty.

If you have a servicing or technical question you can contact us using the information below. If you return your light for repair, no work will be carried out until you have been contacted with the cost for the repair. If you are outside of the UK it would be quicker in the first instance to contact your local distributor.

+44 (0)1798 839300

service@use.group

Ultimate Sports Engineering Ltd  
Unit 4 Bury Mill Farm  
Bury  
West Sussex  
RH20 1NN  
United Kingdom

**#ownthenight**

For more information please visit:  
[exposurelights.com](http://exposurelights.com)

MADE IN  
GREAT BRITAIN



EXPUG1.2




LINK • LINK+ • SWITCH • TRACE • TRACE R • TRACE R ReAKT

## CHARGING

Fully Charge your light **before** first use.

Locate the USB charging port by pulling away and down on the tab of the silicone band where the USB symbol  is etched onto the light's body.

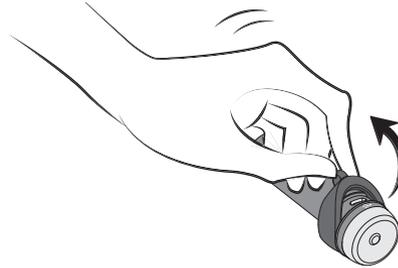

Fully insert the USB charging cable and begin charging from a USB supply.

An LED behind the lens will flash green to indicate that it is charging and then turn solid green when the light is 95% charged, then the remaining 5% is trickle charged.

Approximate charge times from a 500 mA supply are:

**Link/Trace/TraceR: 1.5 hours**

**Link+/Switch: 7 hours**

⚠ **IMPORTANT:** After charging is complete correctly replace the silicone band to prevent water ingress.

## LIGHT OPERATION & BATTERY LIFE

To turn the light on press the function button **twice** in quick succession.

**Switch/Trace/TraceR:** The light will turn on in the mode that was last used. A single press of the function button will cycle between a constant beam and a pulse.

**Link/Link+:** The light will turn on in the mode that was last used. There are 7 modes that include having either the front or rear LED lit, press the function button once to cycle to the next mode.

To turn any of the above lights OFF hold the function button down until there is a double flash and then release.

Immediately after the light is turned off the LED colour indicates the percentage (see table) of the remaining battery life, functioning as a 'Fuel Gauge'.

## USER GUIDE


Function Button



Fuel Gauge

LED COLOUR	BATTERY %
GREEN	100 - 50
AMBER	50 - 25
RED	25 - 5
RED FLASH	5 - EMPTY

## HANDLEBAR MOUNTING - SWITCH & TRACE

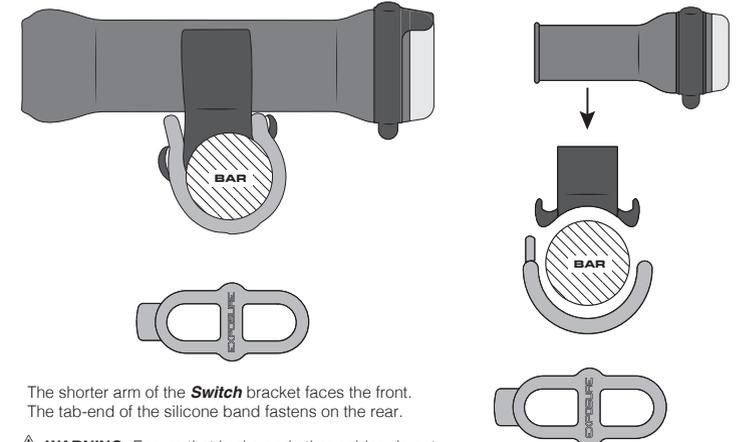


The shorter arm of the **Switch** bracket faces the front. The tab-end of the silicone band fastens on the rear.

⚠ **WARNING:** Ensure that brake and other cables do not catch on the light or its bracket.

## HELMET MOUNTING - LINK & LINK+

Try the short bolt first - if this isn't long enough use the longer bolt. **Do not over-tighten.**

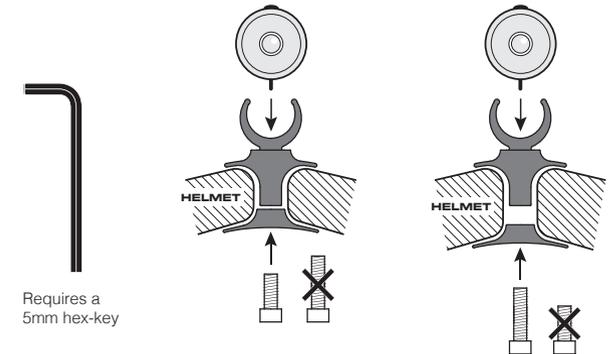


Requires a 5mm hex-key

**NOTE:** The angle of the light can be adjusted by rotating and tilting the ball joint.




### SEATPOST MOUNTING - TRACE R


Additional brackets, silicone bands and a saddle rail bracket are available from [exposurelights.com](http://exposurelights.com)

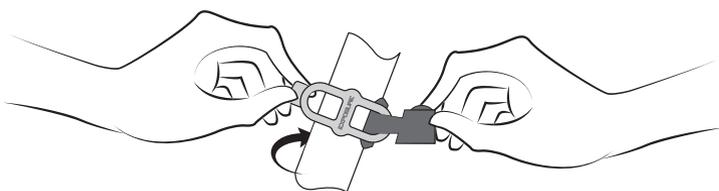


The tab-end fastens onto the lug.

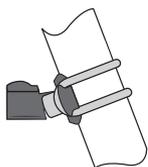

Click the TraceR **securely** into place.

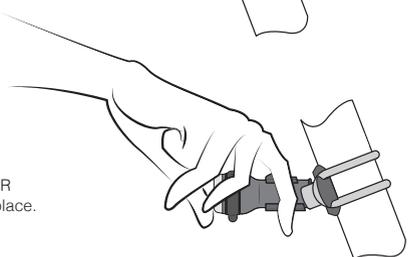

**WARNING:** The TraceR bracket is angled so the light will shine directly back when correctly attached, make sure it is in the correct orientation.

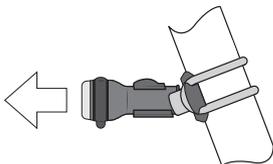

### DAYBRIGHT



We recommend using your light in DayBright mode during the day for your safety.

To access DayBright mode you need to be in Program 1 for the Switch, Trace and TraceR, or High for the Link and Link+, and then cycle to the Flash mode using the function button.

### OPTIMISED MODE SELECTOR (OMS)



OMS allows you to select a burn time tailored to your needs, the longer the burn time the lower the lumen output, if you double burn time, you halve lumen output.

### OMS SWITCH, TRACE & TRACE R



There are three programs to choose from that are shown on the light body.

With the light OFF press and hold the function button, after 2 seconds the light will flash once, twice and then a third time. These flashes correspond to the different programs and you release the function button after the appropriate flash. e.g. to access Program 2 you release the function button after the 2nd flash.

The light will then remain in the selected Program, regardless if being turned off and on, until another Program is selected.

PROGRAM	MODE	
	CONSTANT	FLASH
1 HIGH	3 hrs	6 hrs
2 MEDIUM	6 hrs	12 hrs
3 LOW	12 hrs	24 hrs

PGM - Program  
C - Constant  
FI - Flash



An abbreviated version of this table is etched onto the light.

### ReAKT & PELOTON MODE (TRACER ReAKT ONLY)



To activate ReAKT you will need to use OMS. Start with the light OFF and hold down the Function Button. After 2 seconds the light will flash regularly, after the 4th flash release the Function Button and ReAKT Technology will be activated and live when the light is turned on.

To activate Peloton Mode, start with the light OFF and hold down the Function Button. After 2 seconds the light will flash regularly, after the 5th flash release the Function Button and Peloton Mode will be activated and live when the light is turned on.

To deactivate ReAKT and Peloton Mode start with the light OFF and hold down the Function Button. After 2 seconds the light will flash regularly, after the 6th flash release the Function Button and the light will be reset.

**NOTE:** ReAKT and Peloton Mode are an either/or option and can't function simultaneously.

### OMS LINK & LINK+



#### LINK/LINK+

There are three programs to choose from; 1 High, 2 Medium and 3 Low and the burn times are shown on the light body.

With the light OFF press and hold the function button, after 2 seconds the light will flash once, twice and then a third time. These flashes correspond to the different programs and you release the function button after the appropriate flash. e.g. to access Program 2 Medium, you release the function button after the 2nd flash.

The light will then remain in the selected Program, regardless if being turned off and on, until another Program is selected.

WHITE LED	RED LED	MODE	LINK			LINK+		
			1 HIGH	2 MEDIUM	3 LOW	1 HIGH	2 MEDIUM	3 LOW
CONSTANT	CONSTANT	1	1.5 hrs	3 hrs	6 hrs	3 hrs	6 hrs	12 hrs
CONSTANT	FLASH	2	3 hrs	6 hrs	12 hrs	6 hrs	12 hrs	24 hrs
FLASH	FLASH	3	3 hrs	6 hrs	12 hrs	6 hrs	12 hrs	24 hrs
CONSTANT	OFF	4	3 hrs	6 hrs	12 hrs	6 hrs	12 hrs	24 hrs
OFF	CONSTANT	5	3 hrs	6 hrs	12 hrs	6 hrs	12 hrs	24 hrs
FLASH	OFF	6	6 hrs	12 hrs	24 hrs	12 hrs	24 hrs	48 hrs
OFF	FLASH	7	6 hrs	12 hrs	24 hrs	12 hrs	24 hrs	48 hrs

**WARNING:** The etch on the underside of the Link and Link+ does not display all modes due to space. It shows the number of LEDs in use to condense information.

PGM - Program  
C - Constant  
FI - Flash  
H - High  
M - Medium  
L - Low

